

S-85 UNIVERSAL PLUG FOR DRAIN SUMPS & DISTRIBUTION BOXES



Use as
S-85 plug to
seal unused
holes




Or modify the S-85 Seal to
use as a pipe seal



1 - Identify the size pipe you wish to attached to your Tuf-Tite D. Sump or D. Box

2 - Identify the indentation on the S-85 Seal that corresponds with the pipe size

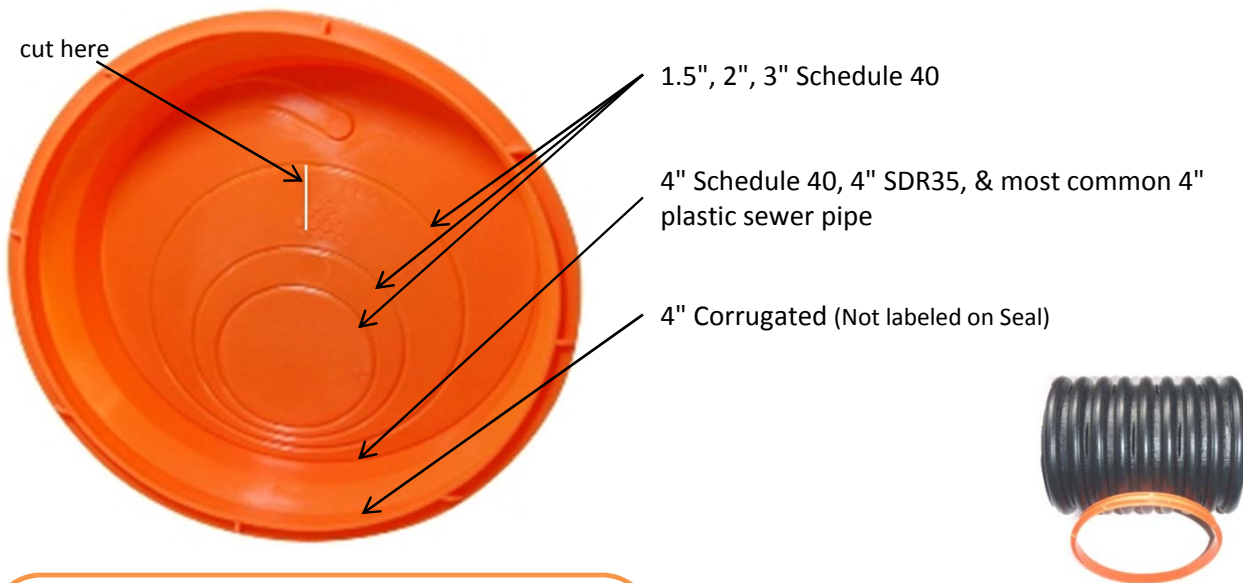

3 - Prior to installing the seal in the box, choose the appropriate size tear out. Using a utility knife start a small cut perpendicular to the indentation. (See white sample cut line in drawing for 3" hole.)

4 - Then with your fingers tear the material along the indentation until you completely remove the circle of material

5 - Insert the modified seal to the Sump or D. Box along the recessed area on the outer ring of the seal. **DO NOT ATTACH THE SEAL TO THE PIPE FIRST**

6 - Insert the pipe into the seal

